# Spring-return damper actuator, ATEX version



# Description

Damper actuator SRX serie to operate and position air dampers in HVAC systems.

- For air dampers up to approx. 1 m<sup>2</sup> up to 4,5 m<sup>2</sup>
- Nominal voltage 24 Vac/dc and 230 Vac
- · Control: 2-point with spring return
- Caracteristics: universal spindle clamp fo easy direct mounting, shaft diameter 10x10 mm / 12x12 mm, minimum shaft length 80 mm, anti-rotation bracket provided for stability, selectable direction of rotation, adjustable angle of rotation, 1 m cable connection.



### Technical features

		0.51/	0.00	001111	<b>OD</b> V//07	001//	001//	
Actuator model		SRX5A	SRX5B	SRX10A	SRX10B	SRX15A	SRX15B	
Damper area	m <sup>2</sup>	1		2		3		
Nominal torque	Nm	5		10		15		
Power supply	V	24 AC/DC	230 V AC	24 AC/DC	230 V AC	24 AC/DC	230 V AC	
Frequency	Hz	50/60						
Power consumption								
- in operation	W	7						
- at rest	W	3						
Running time for motor	s < 150							
Running time for spring	s < 30							
Sound power level	db (A)	db (A) 5062						
Control signal	2 points, on-off							
Auxilary switch rating	3 (1,5) A, AC 250 V							
Life Cycle	cycles	cycles ≥ 10.000						
Rotation angle	Max 93°							
Protection class		III	II	III	II	III	II	
Protection degree	IP66							
Working range °C	-20+60° C							
Working range RH	595% RH, non-condensating							
Storage temperature	-40+70° C							
Maintenance	free							
Standards	Conformità CE, RoHs, ATEX 2014/34/UE							
ATEX	Ex d II B T6 Gb Ex IIIC T85°C Db							
Application	Zone 1 and zone 2, zone 21 and zone 22							
Application			20110	1 4114 20116 2, 2	Zono Zi ana Z	ONO ZZ		


#### Directives:

IEC60079-0:2011, EN60079-0:2012 electrical apparatus in explosive gas atmosphere General requirements. IEC60079-1:2007, EN60079-1:2007 electrical apparatus in explosive gas atmosphere part1: flameproof " d ". IEC60079-31:2008, EN60079-31:2009 Equipment dust ignition protection by enclosure " t ".





# Electrical wirings

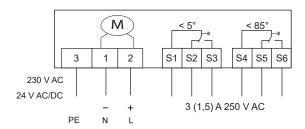

## Use and maintenance

- Cable gland and thread on the M16 × 1.5 housing, cable diameter from 6 to 8 mm. When the actuator is installed on site, the cable gland must be installed by the user and whose degree of protection must not be less than II2D Ex tb IIIC T85 ° C Db.
- Earth terminal tightening torque 2 Nm.
- Tightening torque of the flameproof joint 3,2 Nm.
- External ground bolt M4x6, by pressing the 4 mm<sup>2</sup> conductor.
- Disassembly is prohibited without authorization. Do not open with the power on. Do not open the lid in the presence of explosive gas. Use a damp cloth when opening.
- Repair of flanged joints must be performed in accordance with the structural specifications provided by the manufacturer. Repairs must not be carried out on the basis of the specifications in table 3 and table 4 of the EN 60079-1: 2007 directive.
- The cable gland must have a degree of protection compatible with the intended use.
- During assembly, operation and maintenance, the operator must follow the requirements of the EN 60079-14 standard and this instruction manual.
- Repair and overhaul must comply with EN 60079-19.

# Dimensions (mm)

